

Driver Installation Instruction for RR622

RR622 non-RAID mode Driver

The bundled controller card is defaulted using RR622 non-RAID mode. The non-RAID mode is used with TR4UT(-B)P and TR5UT(-B)P so that provide features such as plug and play with eSATA. Please find the driver in the following folder:

- Windows – Vista, Windows 2008, Win7
CD-ROM: \driver\Non RAID Driver\Vista-Windows2008-Win7
- Windows – WindowsXP-2000-2003
CD-ROM: \driver\Non RAID Driver\WindowsXP-2000-2003
 1. After installing the RR62x host adapter, boot to the Windows operating system.
 2. Windows should automatically detect the card, and displays the “Found New Hardware Wizard”. Select “Locate and install driver software”. When Windows asks: “Windows needs your permission to continue”, select “Continue”.
 3. When asked to search online select “Don’t Search Online”.
 4. Select “I don’t have disc, show me other options”.
 5. Select “Browse my computer for driver software”.
 6. Browse to the location of the driver and click “Next”.
 7. When asked: “Would you like to install this driver software?” select “Install”.
 8. Reboot the system when prompted. The RocketRAID host adapter will be ready for use after Windows reboots.
- MAC
CD-ROM: \driver\Non RAID Driver\Mac\RR622M-mac-v110LA-100421-DisableBuzzer.dmg
 1. After installing the RR62x host adapter, boot to the Mac.
 2. **Double click on the above location. Follow the instruction and the driver will be installed.**
- Linux
CD-ROM: \driver\Non RAID Driver\Linux\rr62x-linuxla-src-v1.0-100421-1320.tar.gz
 1. Linux operating systems require recompile of the driver. Please follow the attached instruction inside of tar.gz for more information.