

# Installing Non-RAID (JBOD) BIOS

## Non-RAID BIOS vs. RAID BIOS (PC Only; Optional for Non-RAID Applications)

The controller card is pre-installed with RAID BIOS. The non-RAID BIOS will not display the RAID POST screen. Updating to a non-RAID BIOS is optional. Failure of the BIOS update will damage the controller card.

### Installing Non-RAID BIOS

1. Non-RAID BIOS is located under: *CD-ROM:\driver\Non RAID Driver\BIOS*.
2. Unzip the files and extract the driver to your computer.
3. Create a bootup disk (USB or Floppy) for DOS mode and copy extracted file to the bootup disk.
4. Bootup from the bootup disk and type: *Load rr622.v11*.